

TruNatur^{by} **EGR** DECOR

Waterproof Cabinetry

Fabrication and Installation Guide



Thank you for interest in the **TruNatur Waterproof** product range.

This document provides a comprehensive set of technical specifications,
as well as answering common questions about machining, fabrication, installation, and care.

For further information contact us at info@egrdecor.com.au
or contact your nearest TruNatur or EGR distributor. For more information, please visit our website.

Contents

Overview	3
Applications	3
Quality Features	3
TruNatur Waterproof Panels	3
Important Information	3
Warranty.....	3
NANO Technology	4
TruNatur Waterproof Panels – Installation & Fabrication Top Tips	4
Certification	5
Unsuitable Applications	5
Guaranteed Quality.....	5
Storage and Handling	5
Fabrication	6

Overview

TruNatur Waterproof is a high-performance, water-resistant panel solution that combines a durable Weatherproof Composite Core (WCC) with a premium polymer veneer, bonded using advanced PUR reactive hotmelt technology. The premium polymer veneer features a nano coated surface that offers superior resistance to scratches, stains, chemicals, UV exposure and antibacterial protections.

Applications

TruNatur Waterproof is designed for interior decorative vertical and light-duty horizontal applications –including cabinet doors, drawer fronts, face panels, and floating shelves– and offers a high-performance alternative to natural timber veneer in flood-prone or high-moisture areas such as kitchens, bathrooms, laundries, utility rooms, and mudrooms.

Quality Features



Nano Technology



Scratch Resistance




Stain Resistance



Chemical
Resistance



UV-Protected

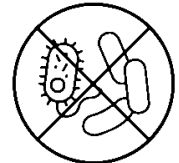

Antibacterial




Easy to Clean




Easy to work



Weatherproof

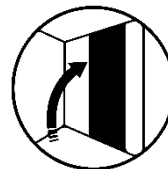

Vertical
applications

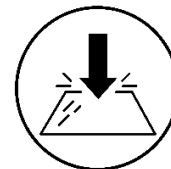

Light-duty
horizontal
applications

TruNatur Waterproof Panels

Premium polymer veneer offers different woodgrain patterns and textured embossing for a natural timber look and feel.

Substrate	Finished Panel Size	Application	Weight	Finish
Weatherproof Composite Core (WCC)	2400x1200x18mm	Cabinet doors, drawer fronts, face panels, and floating shelves	13kg/m ²	Woodgrain textured


Important Information

- Fabrication and installation must comply with AS/NZS 4386 standard and relevant guidelines in this document.
- EGR DECOR is not liable for improper fabrication or installation of TruNatur products.
- It is the installer's responsibility to ensure the product's suitability for the intended application.

Warranty

- TruNatur panels include a limited 7-year warranty.
- TruNatur edgbanding include a limited 1-year warranty.

NANO Technology

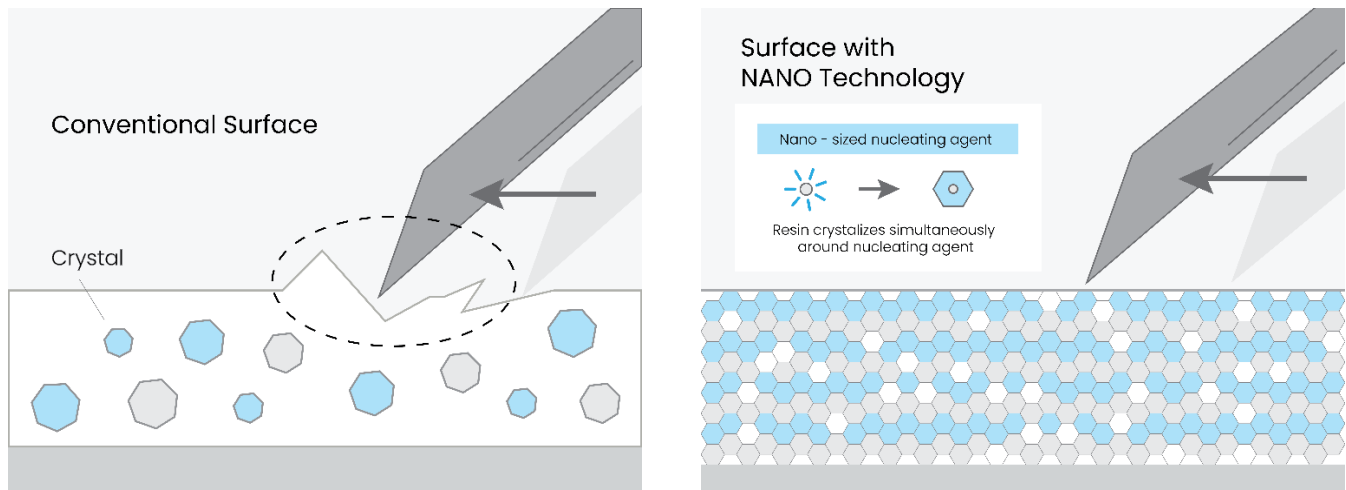

The NANO technology offers superior resistance compared to traditional finishes. With a special resin-crystallization method using nanosized materials, it achieves higher performance and durability in decorative sheets.

TruNatur Waterproof Panels – Installation & Fabrication Top Tips

- Install only in indoor, undercover areas, away from direct sunlight.
- Store panels flat, horizontal, and fully supported at all times.
- Panels can be cut and drilled using the same tools as MDF and other wood-based materials.
- Compatible with all standard hardware and hinge systems. Use 5 mm Euro screws for best results.
- Single doors should not exceed 600 mm width to maintain strength and stability.
- Place fixing points every 300 mm or less for proper support.
- Pre-drill and countersink to ensure stronger joints.
- Avoid cut-outs or openings; if required, reinforce to minimise warping/twisting.
- Seal all edges with suitable edging or sealant to protect against moisture and damage.
- Edgebanding is suitable with both EVA and PUR adhesives.
- Do not use as routed panels where the core is exposed, as this may cause bowing.
- Clean surfaces gently — avoid harsh chemicals, solvents, or abrasives.
- Always refer to the full TruNatur technical documents and warranty for complete guidance

Certification

- TruNatur has achieved GreenTag PHD™ PlatinumHEALTH™ rating
– recognised by WELL™ and LEED® as a world-leading certification for product health.

Unsuitable Applications


- TruNatur Waterproof panels are not intended for structural applications.
- TruNatur Waterproof panels are not suitable for outdoor areas.
- TruNatur Waterproof panels are combustible materials.

Guaranteed Quality

- TruNatur Waterproof panels comply with the relevant sections of AS/NZS4386.
- TruNatur is manufactured in Australia at EGR's ISO 9001-accredited facilities.
- All panels are laminated with advanced PUR reactive hot melt bonding technology by EGR.
- TruNatur Waterproof panels is designed to withstand full water submersion under ambient conditions for up to 7 days with no noticeable change

Storage and Handling

- Always handle panels with two people to prevent breakage or damage.
- Lift panels during loading and unloading, do not slide them.
- Store panels in a clean, dry, and well-ventilated area.
- Keep panels stored flat, horizontally, and fully supported at all times.
- Never transport or store panels in direct sunlight.
- Place panel packs on four evenly spaced bearers on a level, hard, and dry surface.
- Stack multiple packs with properly aligned gluts/bearers to ensure stability
- Protect panels with cover boards on the top and bottom of the stack.
- Follow correct storage practices to avoid bowing.

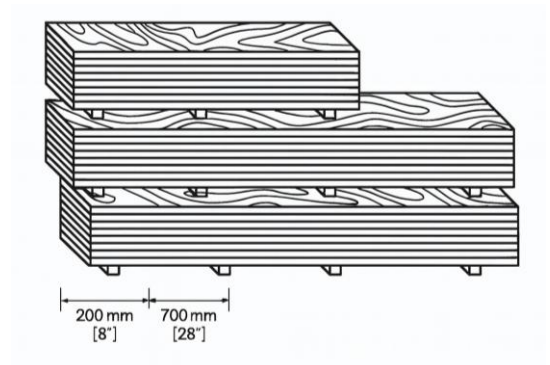

Correct storage

Fabrication

Overview

- TruNatur Waterproof panels can be cut and drilled with standard woodworking tools.
- Always test cut and drill on a sample piece to determine the optimal settings.
- Rough edges may occur due to excessive friction, inadequate support, or worn/improper tooling.
- Adjust processing to prevent masking strands at the edges, which can complicate edgebanding.
- Keep machines well-ventilated and use dust extraction during processing.
- Control heat during cutting to prevent edge melting or surface marks.
- Inspect all panels for defects on arrival, before cutting or fabrication.

Cutting

- TruNatur Waterproof panels can be cut using standard carbide or diamond tools.
- TruNatur Waterproof panels cut best with tools specifically designed for HPL.
- A small-diameter, 2-flute solid carbide compression bit is recommended.
- Recommended cutting parameters

RPM	16,000–18,000
Feed rate:	Moderate — set to avoid burning from slow feeds or chipping from excessive speed.


- Other cutting parameters are the same as MDF.

Saw Cutting

- TruNatur Waterproof can be cut using standard setting on beam and panel saws.
- A sharp carbide-tipped triple chip grind (TCG) blade with 3 to 5 teeth per cm is recommended.
- Maintain a low cutting height (15–30 mm) at standard or lower RPM to prevent overheating.
- Keep a steady, continuous feed speed — avoid stopping during the cut.
- A scoring blade should be used on panel saws to prevent edge chipping.

Drilling

- Use carbide or diamond-tipped drill bits with a point angle of 60° to 80° to ensure clean cuts and minimize chipping.
- Maintain a slow to moderate drill speed with low feed pressure to prevent overheating and material damage.
- Secure the panel on a stable surface with proper backing to prevent vibrations and reduce breakout on the exit side.
- Always drill perpendicular to the panel surface to ensure clean, precise holes and avoid delamination.
- Drill holes slightly larger than fasteners to allow expansion and prevent cracking.

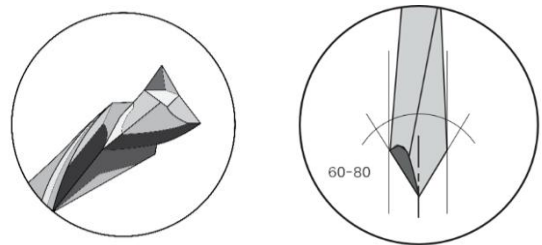


TruNatur Waterproof Panel – Size & Design Requirements

- Single door panels must not exceed 600 mm in width.
- TruNatur Waterproof panels must not have cutouts or openings. If necessary, reinforce the door or panel with a frame or support to prevent warping or twisting

Hinge Recommendation

- Always test hinge drilling on a sample panel to confirm depth and backset.
- TruNatur Waterproof doors require the correct number of hinges, with spacing no more than 300mm apart.

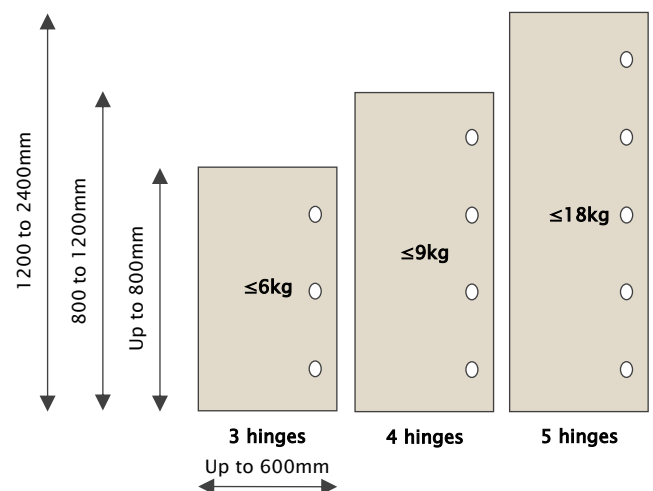

General Assembly Recommendation

- TruNatur is compatible with conventional hardware and hinge systems. Use 5mm Euro screws for a strong and secure installation.
- Use stainless steel or outdoor-rated hardware and fasteners in harsh environments.
- For doors and front panels, fixings should be spaced at maximum 300mm apart.
- If drawer system fasteners are spaced over 300mm apart, add extra fixing points. A support bracket is usually fitted under the bottom drawer panel.
- Do not over-tighten screws or apply force (e.g., hammering) during assembly, as this may damage the panel.


Cleaning During Fabrication

- Wipe spills or stains immediately to avoid permanent damage, residue buildup, or surface deterioration.
- During fabrication, if surface contamination appears, lightly dampen a microfiber cloth with white spirit (mineral turpentine) and gently wipe.
- Use new cleaning products with caution—test on an inconspicuous area first.
- Do not use abrasives, strong solvents, or harsh chemicals.
- The following products must never be used:

- ✗ Acidic cleaners e.g. vinegar, rust removers, or limescale removers
- ✗ Alkaline cleaners e.g. bleach, oven cleaners, baking soda.
- ✗ Ammonia-based cleaners e.g. window and glass cleaners
- ✗ Strong solvents e.g. acetone, isopropyl alcohol (IPA) or methylated spirits
- ✗ Abrasive cleaners e.g. scouring pads, rough sponges, or gritty cleaners like CIF
- ✗ ABS edgetape cleaner.

Edge Finishing

- TruNatur edgeband works with EVA and PUR adhesives
- Use PUR glue bonding for harsh environments.
- Conduct run trials to determine the optimal settings and operations for each job.
- Adjust trimming tools and scrapers to avoid damaging the textured surface or causing lips.
- Use white adhesive for white panels and transparent adhesive for coloured or woodgrain panels.
- Only use cleaning agents recommended by the adhesive manufacturer and always test on a small sample first.
- During edging, if glue overrun appears, if surface contamination appears, lightly dampen a microfiber cloth with white spirit (mineral turpentine) and gently wipe.
- ✗ Never use ABS edgeband cleaners on TruNatur.

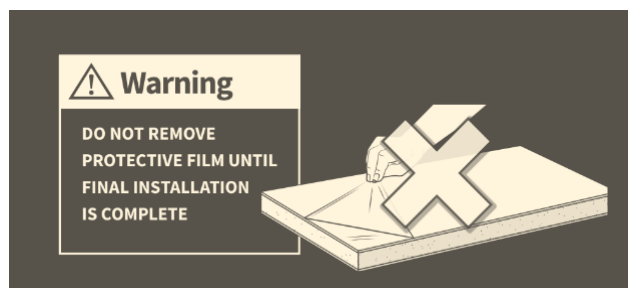

TruNatur^{by} **EGR** DECOR

Waterproof Cabinetry

Fabrication and Installation Guide

EGR Decor

45 Machinery St, Darra, Brisbane
Queensland 4076, Australia

www.trunatur.net

info@egrdecor.com

+61 7 3718 1100

1. EGR expressly disclaims any representations or warranties of any kind, whether express or implied, as to the accuracy, currency, completeness and/or the merchantability or fitness for a particular purpose of any information contained in or provided via this documentation and/or any service or product described or promoted in this document. 2. It is the customer's responsibility to thoroughly examine the product using a qualified person, to determine whether it is suitable for the application it was purchased for. 3. The receiver of our products is fully responsible to check and to take into account possible third party's patent rights, as well as the existing laws in the country of installation prior to installing our product. 4. No liability may be derived from these images or statements nor from our free technical advice. 5. EGR reserves the right to change, add or remove colours or product without notice. 6. EGR Decor and EGR are registered trademarks. 7. Images and colours should be used as a guide only. 8. Ten Year Indoor Warranty: The EGR Decor warranties cover faulty materials for the periods specified on the relevant product warranty documents.

The EGR Decor warranties commence from the date of sale by EGR, they are not transferable and are subject to the terms, conditions and exclusions contained within those warranties.

@ Copyright 2024 / Patent Pending Oakmoore Pty Ltd trading as EGR