

General Cleaning Guide


Step 1:

Use warm soapy water and a clean microfiber cloth to wipe the surface sheet in a back-and-forth motion until the mark is removed. Dry gently with a clean microfiber cloth.



Step 2:

Use Novus No.1 (Plastic Clean & Shine) by Novus or Matt Maxx by Vuplex regularly to maintain your StyleLite finish.

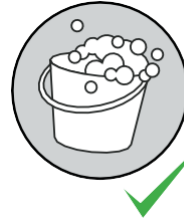

DO NOT APPLY THE PRODUCT DIRECTLY TO THE SHEET

Apply the recommended cleaning product to a damp microfiber cloth and then clean the sheet as instructed in step one.

Step 3:

If the mark persists, you can use one of the cleaning products listed below. ALWAYS wipe the face sheet down with a damp clean microfiber cloth after you are finished in order to remove residue that could damage the sheet.

- ✓ Sugar soap
- ✓ Low odor kerosene
- ✓ 9:1 water to Isopropyl Alcohol (IPA) mix

NEVER USE:

- | | |
|--|--|
| ✗ Edge band glue cleaner* | ✗ General cleaner (e.g., BAM) |
| ✗ Acids (citric, hydrochloric, sulfuric...etc.) | ✗ Synthetic oils/lubricants |
| ✗ Products containing solids or abrasives (oven cleaner, drain cleaner, bleach, toothpaste...etc.) | ✗ Disinfectant sprays (e.g., Lysol, Clorox, Glen 20) |
| ✗ Alcohols (ethanol, methanol, highly concentrated IPA, etc.) | ✗ Brushes, scourers, or abrasive cleaning clothes |
| ✗ Nail polish remover (acetone and acetone-free) | ✗ Abrasive cleaners |
| | ✗ Thinners or methylated spirits |

✗ Edge band cleaners (ABS cleaners) are never to be used on StyleLite, including during edge-banding.

👉 The protective film adhered to the StyleLite sheet must stay on during edge-banding. The film must also stay on during all processing of the panels until it is fully installed to prevent scratching



Repairable Surface – TruGloss Only

 Please Note	The repair advice below applies only to StyleLite TruGloss products. TruMatte cannot be repaired
--	--

Removing Marks and Light Scratches

Apply Novus® No. 2 (Fine Scratch Remover) by NOVUS or a good quality liquid polish (e.g. 3M™ Finesse-It™ II, Kitten® Polishing Wax) to clean microfiber cloth. Gently polish the affected area using circular motions. Then remove polish using General Cleaning procedure above



Removing Heavier Scratches

Apply Novus® No. 3 (Heavy Scratch Remover) by NOVUS or a good quality liquid polish (e.g. 3M™ Finesse-It™ II, Kitten® Polishing Wax) to clean microfiber cloth. Firmly polish with a back-and-forth motion at right angles to the scratches. Then use “Removing Marks and Light Scratches” procedure described earlier.

Ensure all polish residues are removed completely from the StyleLite surface.

Low speed electric buffing can also be used to repair marks and scratches on gloss sheet and panels

